

NOTE:  
ALL MBI DRAWINGS AND DETAILS ARE INTENDED TO PROVIDE GENERIC  
INSTALLATION GUIDELINES ONLY. ACTUAL FIELD CONDITIONS MAY VARY AND NEED  
TO BE CONFIRMED BY OTHERS.

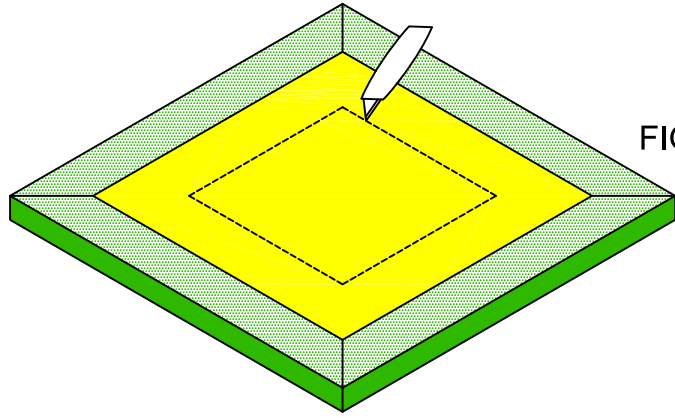


FIG.1

FIG.1: MEASURE THE LOCATION OF THE CUT-OUT AND  
MARK THE BACK OF THE PANEL.  
DOUBLE CHECK YOUR WORK. REMEMBER THAT WHEN  
MARKING THE BACK OF THE PANEL, THE CUT OUT IS ON  
THE OPPOSITE SIDE.

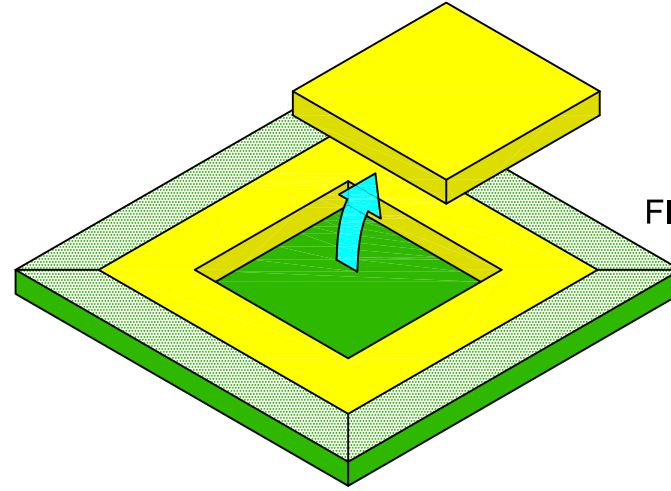


FIG.2

FIG.2: CUT THE FIBERGLASS WITH A RAZOR KNIFE, BEING  
CAREFUL TO KEEP THE BLADE VERTICAL. DO NOT CUT  
THE FABRIC AT THIS TIME. YOU CAN CUT THE  
FIBERGLASS IN LAYERS AND PEEL IT AWAY AS YOU GET  
CLOSER TO THE FABRIC.

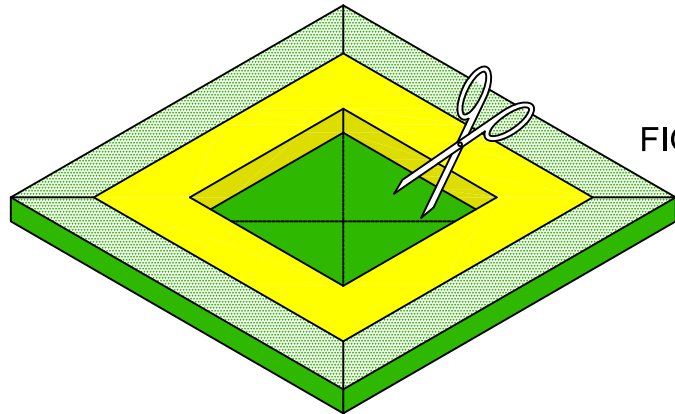


FIG.3

FIG.3: ONCE THE FABRIC IS REVEALED, CUT AN "X" IN THE  
FABRIC, FROM INSIDE CORNER TO INSIDE CORNER.

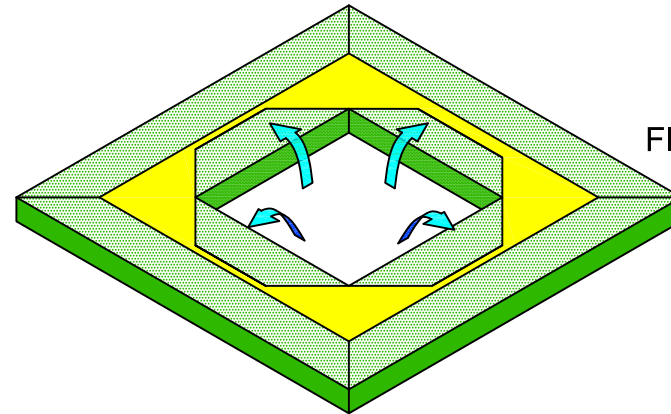


FIG.4

FIG.4: FOLD THE FABRIC TO THE BACK SIDE  
AND ADHERE IT TO THE FIBERGLASS WITH A  
SUITABLE SPRAY ADHESIVE.

MBI Products Company, Inc.  
807 Bond Street  
Elvira, Ohio 44035  
Telephone: (440) 322-6500  
Fax: (440) 322-1900  
Website: www.mbiproducts.com



Revisions:		
No.	Date:	Description:

Sheet Description:  
**MBI Colorsonix® Wall Panel**  
**Panel Cut-out**  
**Details**



Drawn By:	CPB
Date:	12/16/15
Scale:	NA
Drawing Ref:	None
Drawing:	

**CX-07**